





Bluetooth Power Off Time

BT Power Off Time = 1min  69001	BT Power Off Time = 2min  69002
BT Power Off Time = 3min  69003	BT Power Off Time = 4min  69004
BT Power Off Time = 5min  69005	BT Power Off Time = 6min  69006
BT Power Off Time = 7min  69007	BT Power Off Time = 8min  69008
BT Power Off Time = 9min  69009	BT Power Off Time = 10min  6900A
BT Power Off Time = 11min  6900B	BT Power Off Time = 12min  6900C
BT Power Off Time = 13min  6900D	BT Power Off Time = 14min  6900E

<p>BT Power Off Time = 15min</p>  <p>6900F</p>	<p>BT Power Off Time = 16min</p>  <p>69010</p>
<p>BT Power Off Time = 17min</p>  <p>69011</p>	<p>BT Power Off Time = 18min</p>  <p>69012</p>
<p>BT Power Off Time = 19min</p>  <p>69013</p>	<p>BT Power Off Time = 20min</p>  <p>69014</p>
<p>BT Power Off Time = 21min</p>  <p>69015</p>	<p>BT Power Off Time = 22min</p>  <p>69016</p>
<p>BT Power Off Time = 23min</p>  <p>69017</p>	<p>BT Power Off Time = 24min</p>  <p>69018</p>
<p>BT Power Off Time = 25min</p>  <p>69019</p>	<p>BT Power Off Time = 26min</p>  <p>6901A</p>
<p>BT Power Off Time = 27min</p>  <p>6901B</p>	<p>BT Power Off Time = 28min</p>  <p>6901C</p>

BT Power Off Time = 29min



6901D

BT Power Off Time = 30min



6901E