



Set Scanfob 2006 Bluetooth scanner with special UPC-E settings

Scan all barcodes in the box of your desired settings.


Default Setting (UPC-E as is)

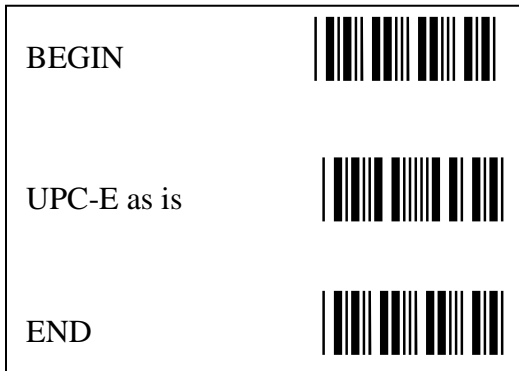


Transmit UPC-E as UPC-A

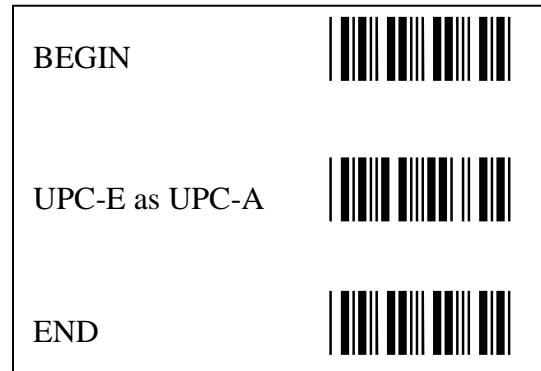


No leading digit, transmit check digit

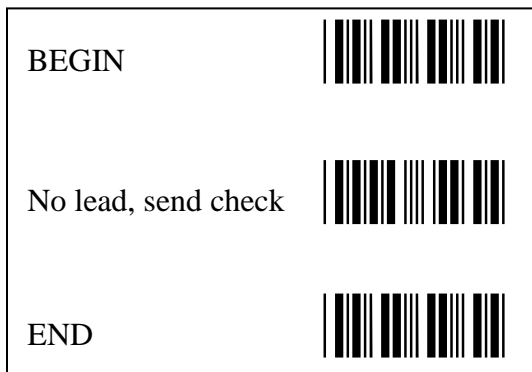

No leading digit, no transmit check digit

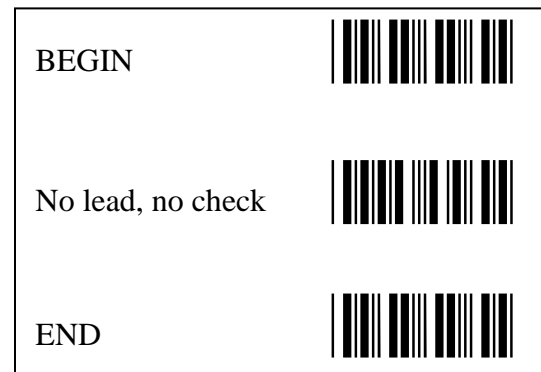

Transmit leading digit and check digit

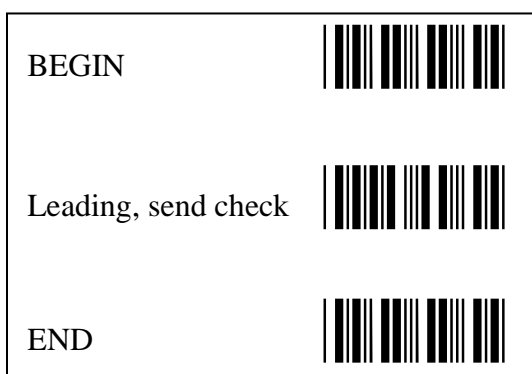

Transmit leading digit, no check digit

